SBP - SHP	Dysfunction Dysfu									the of entreentreentre				
Remove the security piece behind the gun trigger								1						
			_			_		1				_		
Change the motor condensator						1		_				_	_	
Put the pump on a steady place					1								_	
Check the pump silentblocs (tightening, state)					2			_				_	_	
Change the seals n°22													1	
Replace the spi seals of the piston spinnaker and pay attention to the assembling sense								_				2		
Change the manometer/flow meter/indicator if doesn't function								_	1			_	_	
Pump has to be sent to MABI if product doesn't arrive till manometer/flow meter/indicator									2				_	
Pump is out of order								_						1
Change oil every 500 hours								_				1		
Check and ajust the oil level												3		1
Check that suction filter is completely into water and clean		2	1							1				
Check if the hose became porous			2							2			_	
Check the suction hose connection		3												
Replace the used bearings					3									
Check the hose between the hose winder and the pressure regulator (can be blocked)							3							
Unblock the gun: unsettle the hose and clean the gun inlet and outlet							1							
Clean the filter from the gun handle and pay attention to the assembling sense							3							
Change the gun if it stays blocked even after cleaning							4							
Unsettle the gun and make function the empty pump (without product) and unblock the hose (hose connected to the pump)							2							
Change the hose if it stays blocked even after cleaning							4							
Put the filter on the right sense (the side with a big end goes into the gun)							5							
Clean the suction filter if it's blocked or dirty		4												
Turn the button ON/OFF on ON (check if it's well on it)	1													
Replace the button ON/OFF (to be done by a qualified electrician)	5													
Clean up the dirty valves				1										
Change the used valves		5	3							3				
Check the valves supports and clean them		6	4							4				
Check the electrical connection	2													
Change the plug if it doesn't function (test it with an other electrical device)	3													
Check the alimentation cable (cut cable for instance)	4													
Replace the alimentation cable if it's cut or bare near the socket (to be done by a qualified electrician)	6													
Replace the piston if cracked										11			3	
Replace the sprayer if used			5							5				
Change the sprayer if its diameter isn't adapted										6				
Replace the used armaments			6							7			2	
Bad pressure regulator ajustment: completely undo the pressure regulator, press on the trigger of the pistol to unwind hose, and then														
screw the pressure regulator till the required pressure (cf the instruction use)		1									1			
Screw the pressure regulator till the required pressure		1						-				1	-	
Unscrew the pressure regulator and press on it to launch the pump (too much screwed = pression in)								-						
Replace the regulator pressure seals set										8				
Replace the seat of the regulation valve			7					-		9			-	
Check the assembling sense of the set										10				